

PROLED®



PROLED CONTROLLER RGB DMX CC/CA

Bedienungsanleitung User's Manual

Inhalt

Einführung	3
Eigenschaften	3
Anschlüsse	3
Betrieb	4
Typische Beschaltung	5
Funktionen der IR Fernbedienung	5
Vorprogrammierte Farbwechsel Sequenzen	6
DMX Dipschaltertabelle	6
Technische Daten	9

Einführung


Wir bedanken uns für Ihre Wahl des PROLED RGB DMX Controllers. Der PROLED Controller RGB DMX wandelt das weitverbreitete DMX512/1990 Signal mittels hochentwickelter Microcomputer-Technologie in ein Analogsignal um. Das Gerät kann einen bis drei Ausgangskanäle mit jeweils 255 Helligkeitsstufen steuern. Die Beleuchtungsprogramme können einfach über IR Fernbedienung oder DMX Controller ausgewählt werden.

Eigenschaften


- Kompatibel mit dem DMX512/1990 Standard
- 256 Helligkeitsstufen, volle Farbsteuerung
- 3 RGB Kanäle mit je 5A Belastbarkeit
- 256 Graustufen
- 5 vorprogrammierte Farbwechsel Programme
- Infrarot Fernbedienung
- Ansteuerung von LED Modulen mit 1 – 3 Kanälen
- Freie Wahl der DMX Adresse
- Durch die Modularität ist eine direkte Montage zusammen mit den LED Modulen möglich.

Anschlüsse

- 1.) DMX Eingang (RJ45)
- 2.) DMX Ausgang (RJ45)
- 3.) Dipschalter zur Einstellung der Startadresse
- 4.) IR Sensor
- 5.) Ausgangsanschlüsse
- 6.) Eingang für die Gleichspannungsversorgung

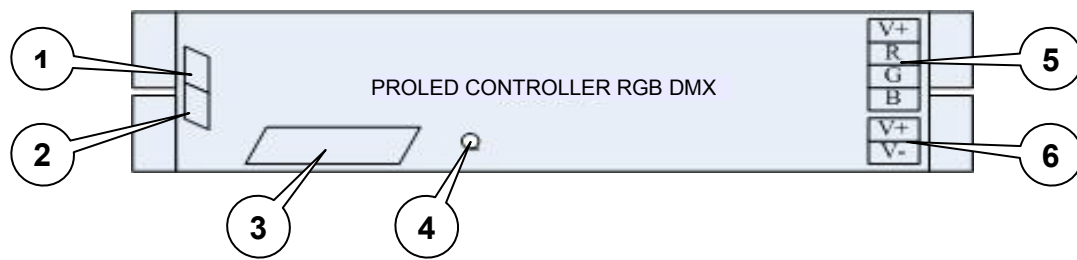

Pinbelegung der DMX Anschlussbuchsen (1/2):

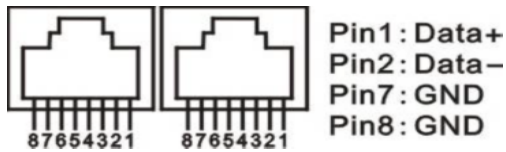

Dipschalter zur Einstellung der DMX Startadresse (3):

Die Einstellung der DMX Adresse entnehmen Sie bitte der Dipschaltertabelle auf Seite 5.

IR Sensor (4):

Infrarotsensor zur Steuerung des PROLED RGB DMX Controllers über die IR Fernbedienung.

Ausgangsanschlüsse (5):

Schraubklemmen für den Anschluss aller Arten von RGB LED Modulen oder einfarbigen LED Modulen mit gemeinsamer Anode (gemeinsamer Pluspol) beim PROLED Controller RGB DMX Version CA oder gemeinsamer Kathode (gemeinsamer Minuspol) bei der Version CC. Der Ausgangsstrom wird automatisch entsprechend der angeschlossenen Last geregelt.

Ausgangsanschlüsse beim PROLED Controller RGB DMX CA: V+; R; G; B


Ausgangsanschlüsse beim PROLED Controller RGB DMX CC: V-; R; G; B

Gleichspannungseingang (6):

Anschluss für ein DC 12-24V Netzteil zur Spannungsversorgung des PROLED RGB DMX Controllers.

Betrieb


Der PROLED Controller RGB DMX kann über ein DMX-512 Lichtsteuerpult oder als Standalone Farbwechsler mit den vorprogrammierten Lichtprogrammen betrieben werden. Folgende Grafik verdeutlicht die Installation bei einem Betrieb über ein DMX-512 Lichtsteuerpult:

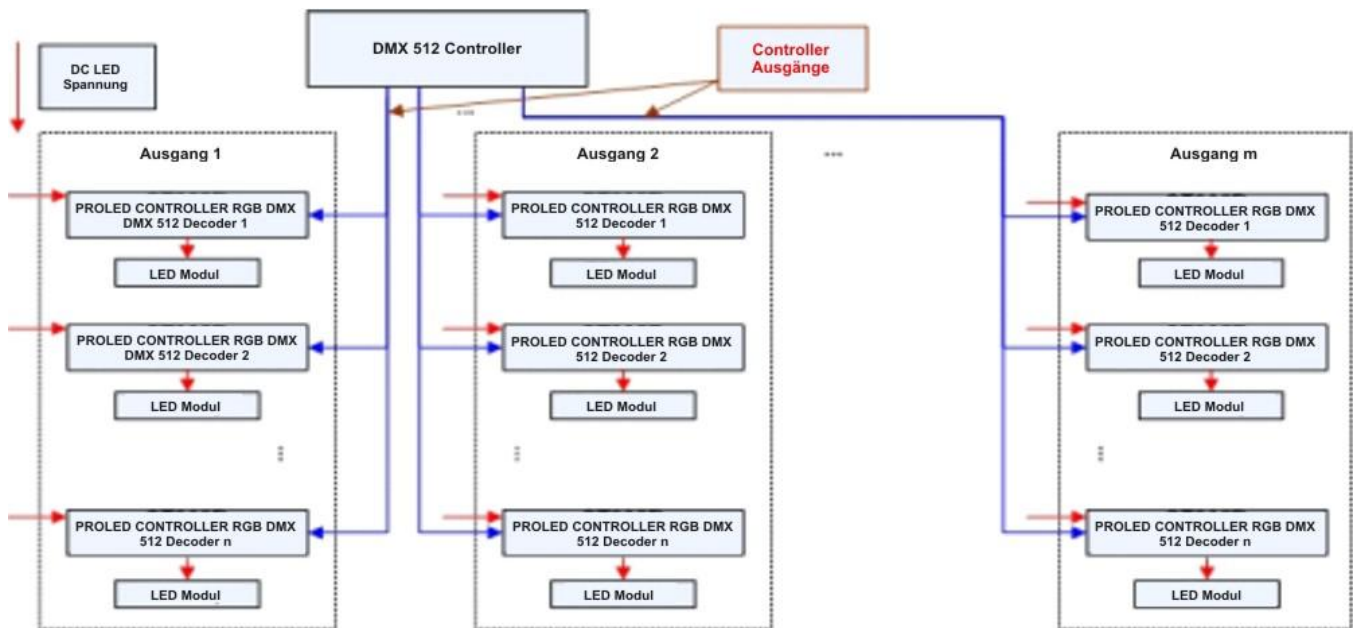


Anmerkung:
 m = Anzahl der DMX512 Controllerausgänge
 n = Anzahl der Anschlüsse pro Ausgang

Typische Beschaltung

PROLED Controller RGB DMX CA:
 (gemeinsamer Pluspol der LED Module)

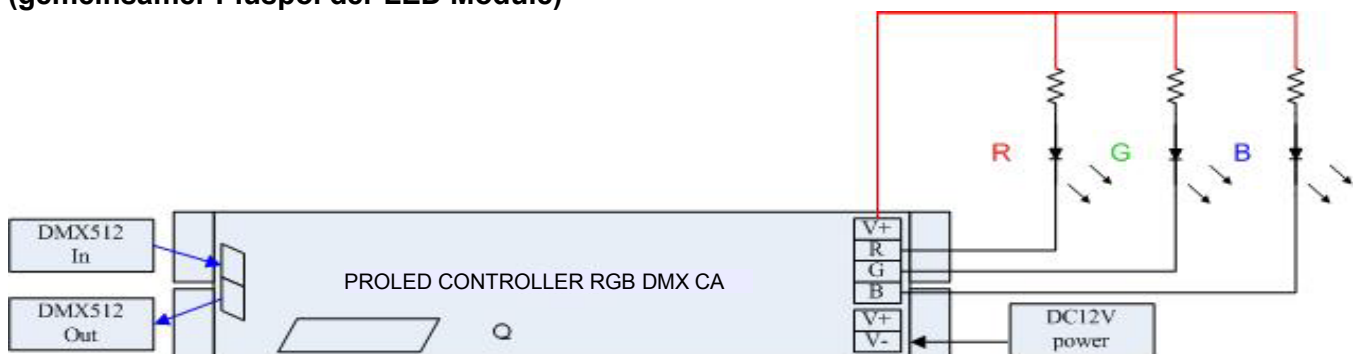

PROLED Controller RGB DMX CC:
 (gemeinsamer Minuspol der LED Module)

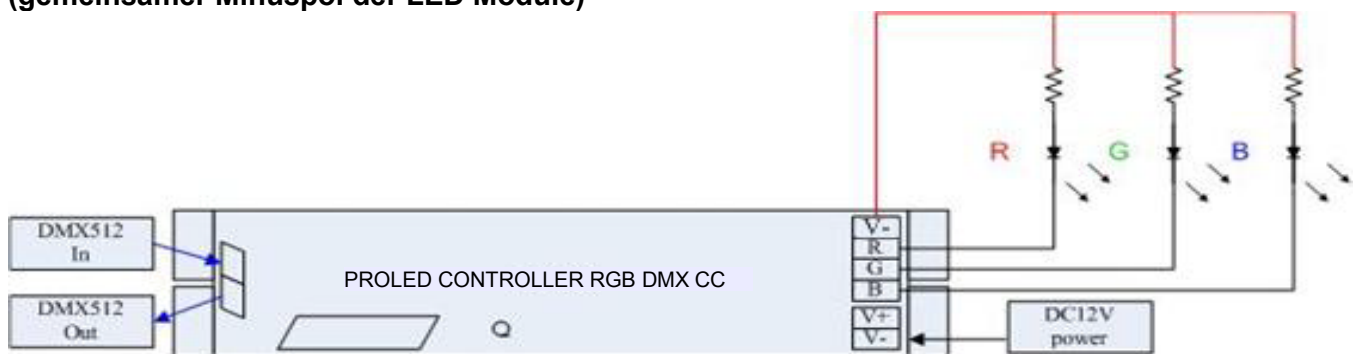

Funktionen der IR Fernbedienung

DMX: Wenn Sie diese Taste drücken, wird der Controller wieder auf die Steuerung über das DMX Signal umgeschaltet und das laufende Standalone Programm wird unterbrochen.

P1-P5: Mit diesen Tasten kann eines der fünf vorprogrammierten Standalone Sequenzen gestartet werden.

P1: Manueller Farbwechsel Rot, Orange, Gelb, Grün, Cyan, Blau, Purpur, weiß

P2: Farbwechselsequenz R->RG->G->GB->B->RG->R

P3: Farbwechselsequenz R->RGB->B->RB->RGB->RG->G->RGB->RB->R

P4: Farbwechselsequenz B->R->G->B

P5: Farbwechselsequenz Black->R->Black->G->Black->B->Black

Lock: Mit dieser Taste wird das Standalone Programm angehalten.

Fade: Schaltet die Farbwechselsequenzen auf Flash oder Fade Modus um (nur P2-P5).

BRIGHTNESS: Mit den + und - Tasten können 16 verschiedene Helligkeitspegel eingestellt werden.


SPEED: Mit den + und - Tasten können 16 verschiedene Geschwindigkeiten für das Standalone Programm eingestellt werden.



Vorprogrammierte Farbwechsel Sequenzen (P2-P5):

Flash Modus

Fade Modus

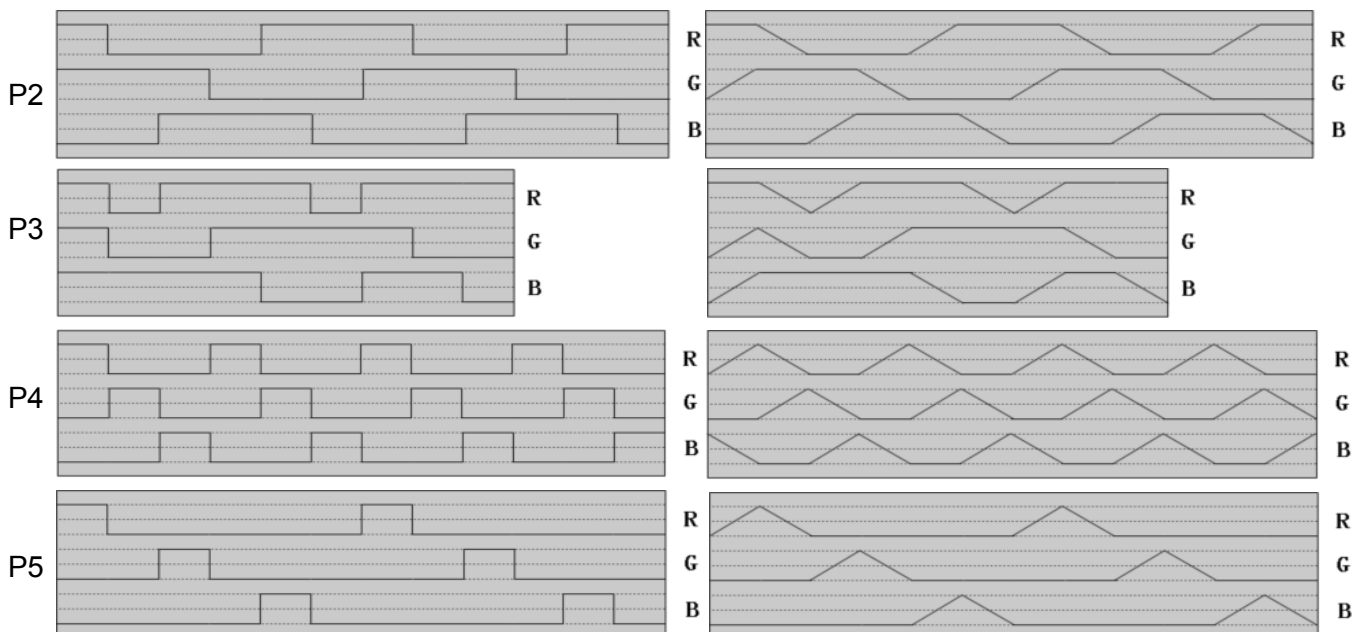

DMX Dipschaltertabelle

Dipschalter	DMX Adr.	Dipschalter	DMX Adr.	Dipschalter	DMX Adr.	Dipschalter	DMX Adr.
123456789	Nummer	123456789	Nummer	123456789	Nummer	123456789	Nummer
100000000	001	001101000	044	111010100	087	010000010	130
010000000	002	101101000	045	000110100	088	110000010	131
110000000	003	011101000	046	100110100	089	001000010	132
001000000	004	111101000	047	010110100	090	101000010	133
101000000	005	000011000	048	110110100	091	011000010	134
011000000	006	100011000	049	001110100	092	111000010	135
111000000	007	010011000	050	101110100	093	000100010	136
000100000	008	110011000	051	011110100	094	100100010	137
100100000	009	001011000	052	111110100	095	010100010	138
010100000	010	101011000	053	000001100	096	110100010	139
110100000	011	011011000	054	100001100	097	001100010	140
001100000	012	111011000	055	010001100	098	101100010	141
101100000	013	000111000	056	110001100	099	011100010	142
011100000	014	100111000	057	001001100	100	111100010	143
111100000	015	010111000	058	101001100	101	000010010	144
000010000	016	110111000	059	011001100	102	100010010	145
100010000	017	001111000	060	111001100	103	010010010	146
010010000	018	101111000	061	000101100	104	110010010	147
110010000	019	011111000	062	100101100	105	001010010	148
001010000	020	111111000	063	010101100	106	101010010	149
101010000	021	000000100	064	110101100	107	011010010	150
011010000	022	100000100	065	001101100	108	111010010	151
111010000	023	010000100	066	101101100	109	000110010	152
000110000	024	110000100	067	011101100	110	100110010	153
100110000	025	001000100	068	111101100	111	010110010	154
010110000	026	101000100	069	000011100	112	110110010	155
110110000	027	011000100	070	100011100	113	001110010	156
001110000	028	111000100	071	010011100	114	101110010	157
101110000	029	000100100	072	110011100	115	011110010	158
011110000	030	100100100	073	001011100	116	111110010	159
111110000	031	010100100	074	101011100	117	000001010	160
000001000	032	110100100	075	011011100	118	100001010	161
100001000	033	001100100	076	111011100	119	010001010	162
010001000	034	101100100	077	000111100	120	110001010	163
110001000	035	011100100	078	100111100	121	001001010	164
001001000	036	111100100	079	010111100	122	101001010	165
101001000	037	000010100	080	110111100	123	011001010	166
011001000	038	100010100	081	001111100	124	111001010	167
111001000	039	010010100	082	101111100	125	000101010	168
000101000	040	110010100	083	011111100	126	100101010	169
100101000	041	001010100	084	111111100	127	010101010	170
010101000	042	101010100	085	000000010	128	110101010	171
110101000	043	011010100	086	100000010	129	001101010	172
101101010	173	000110110	216	110000001	259	011101001	302
011101010	174	100110110	217	001000001	260	111101001	303


Dipschalter	DMX Adr.	Dipschalter	DMX Adr.	Dipschalter	DMX Adr.	Dipschalter	DMX Adr.
123456789	Nummer	123456789	Nummer	123456789	Nummer	123456789	Nummer
111101010	175	010110110	218	101000001	261	000011001	304
000011010	176	110110110	219	011000001	262	100011001	305
100011010	177	001110110	220	111000001	263	010011001	306
010011010	178	101110110	221	000100001	264	110011001	307
110011010	179	011110110	222	100100001	265	001011001	308
001011010	180	111110110	223	010100001	266	101011001	309
101011010	181	000001110	224	110100001	267	011011001	310
011011010	182	100001110	225	001100001	268	111011001	311
111011010	183	010001110	226	101100001	269	000111001	312
000111010	184	110001110	227	011100001	270	100111001	313
100111010	185	001001110	228	111100001	271	010111001	314
010111010	186	101001110	229	000010001	272	110111001	315
110111010	187	011001110	230	100010001	273	001111001	316
001111010	188	111001110	231	010010001	274	101111001	317
101111010	189	000101110	232	110010001	275	011111001	318
011111010	190	100101110	233	001010001	276	111111001	319
111111010	191	010101110	234	101010001	277	000000101	320
000000110	192	110101110	235	011010001	278	100000101	321
100000110	193	001101110	236	111010001	279	010000101	322
010000110	194	101101110	237	000110001	280	110000101	323
110000110	195	011101110	238	100110001	281	001000101	324
001000110	196	111101110	239	010110001	282	101000101	325
101000110	197	000011110	240	110110001	283	011000101	326
011000110	198	100011110	241	001110001	284	111000101	327
111000110	199	010011110	242	101110001	285	000100101	328
000100110	200	110011110	243	011110001	286	100100101	329
100100110	201	001011110	244	111110001	287	010100101	330
010100110	202	101011110	245	000001001	288	110100101	331
110100110	203	011011110	246	100001001	289	001100101	332
001100110	204	111011110	247	010001001	290	101100101	333
101100110	205	000111110	248	110001001	291	011100101	334
011100110	206	100111110	249	001001001	292	111100101	335
111100110	207	010111110	250	101001001	293	000010101	336
000010110	208	110111110	251	011001001	294	100010101	337
100010110	209	001111110	252	111001001	295	010010101	338
010010110	210	101111110	253	000101001	296	110010101	339
110010110	211	011111110	254	100101001	297	001010101	340
001010110	212	111111110	255	010101001	298	101010101	341
101010110	213	000000001	256	110101001	299	011010101	342
011010110	214	100000001	257	001101001	300	111010101	343
111010110	215	010000001	258	101101001	301	000110101	344
100110101	345	001000011	388	111101011	431	010110111	474
010110101	346	101000011	389	000011011	432	110110111	475

Dipschalter	DMX Adr.	Dipschalter	DMX Adr.	Dipschalter	DMX Adr.	Dipschalter	DMX Adr.
123456789	Nummer	123456789	Nummer	123456789	Nummer	123456789	Nummer
110110101	347	011000011	390	100011011	433	001110111	476
001110101	348	111000011	391	010011011	434	101110111	477
101110101	349	000100011	392	110011011	435	011110111	478
011110101	350	100100011	393	001011011	436	111110111	479
111110101	351	010100011	394	101011011	437	000001111	480
000001101	352	110100011	395	011011011	438	100001111	481
100001101	353	001100011	396	111011011	439	010001111	482
010001101	354	101100011	397	000111011	440	110001111	483
110001101	355	011100011	398	100111011	441	001001111	484
001001101	356	111100011	399	010111011	442	101001111	485
101001101	357	000010011	400	110111011	443	011001111	486
011001101	358	100010011	401	001111011	444	111001111	487
111001101	359	010010011	402	101111011	445	000101111	488
000101101	360	110010011	403	011111011	446	100101111	489
100101101	361	001010011	404	111111011	447	010101111	490
010101101	362	101010011	405	000000111	448	110101111	491
110101101	363	011010011	406	100000111	449	001101111	492
001101101	364	111010011	407	010000111	450	101101111	493
101101101	365	000110011	408	110000111	451	011101111	494
011101101	366	100110011	409	001000111	452	111101111	495
111101101	367	010110011	410	101000111	453	000011111	496
000011101	368	110110011	411	011000111	454	100011111	497
100011101	369	001110011	412	111000111	455	010011111	498
010011101	370	101110011	413	000100111	456	110011111	499
110011101	371	011110011	414	100100111	457	001011111	500
001011101	372	111110011	415	010100111	458	101011111	501
101011101	373	000001011	416	110100111	459	011011111	502
011011101	374	100001011	417	001100111	460	111011111	503
111011101	375	010001011	418	101100111	461	000111111	504
000111101	376	110001011	419	011100111	462	100111111	505
100111101	377	001001011	420	111100111	463	010111111	506
010111101	378	101001011	421	000001011	464	110111111	507
110111101	379	011001011	422	100001011	465	001111111	508
001111101	380	111001011	423	010001011	466	101111111	509
101111101	381	000101011	424	110001011	467	011111111	510
011111101	382	100101011	425	001001011	468	111111111	511
111111101	383	010101011	426	101001011	469		
000000011	384	110101011	427	011001011	470		
100000011	385	001101011	428	111001011	471		
010000011	386	101101011	429	000101011	472		
110000011	387	011101011	430	100101011	473		

Die blau hinterlegten Felder repräsentieren die DMX Startadressen für 3 Kanal Decoder, wie etwa für die Ansteuerung von RGB Modulen, da für jeden Kanal eine DMX Adresse belegt wird.

Technische Daten

Kanäle:	3
Eingangssignal:	DMX-512/1990 Digitalsignal
Ausgangssignal:	0-100% PWM Dimmersignal; 5A Belastbarkeit pro Kanal
Stromversorgung:	Gleichspannung DC 12/24V
Ausgangsleistung:	180-360W
Reichweite IR Fernbedienung:	≤10m
Betriebstemperatur:	0-70°C
Abmessungen (L x H x T):	176mm x 30 mm x 39mm
Gewicht:	220g

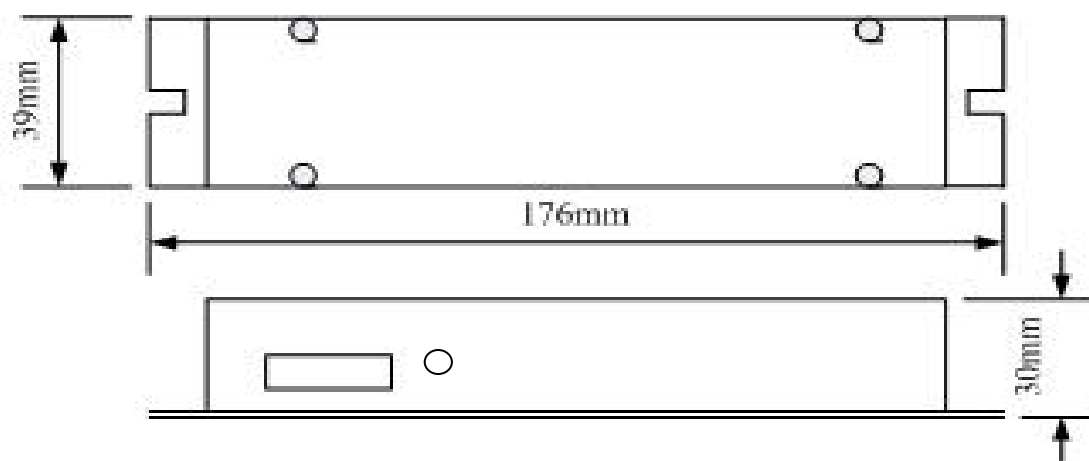

Contents

Introduction	10
Features	10
Connectors	10
Operation	11
Typical Wiring	12
Functions of the IR Remote Control	13
Preprogrammed Colourchange Sequences	13
DMX Dipswitch Table	14
Sepecifications	17

Introduction


We thank you for choosing the PROLED RGB DMX Controller. The PROLED Controller RGB DMX decodes the commonly used DMX512/1990 control signal with sophisticated microcomputer technology to an analogue signal. The device can control one to three output channels with 256 intensity levels each. Lighting programs can be selected via remote control or DMX controller.

Features


- Compatible with the DMX512/1990 standard
- 256 intensity levels, full colour mixing
- 3 RGB channels with 5A power rating each
- 256 greyscale
- 5 preprogrammed colourchange programs
- Infrared remote control
- Control of LED modules with 1 – 3 channels
- Free choice of DMX address
- Modularity allows a direct installation together with LED modules.

Connectors

- 1.) DMX input (RJ45)
- 2.) DMX output (RJ45)
- 3.) Dipswitch for setting the DMX start address
- 4.) IR sensor
- 5.) Output connector
- 6.) DC Input

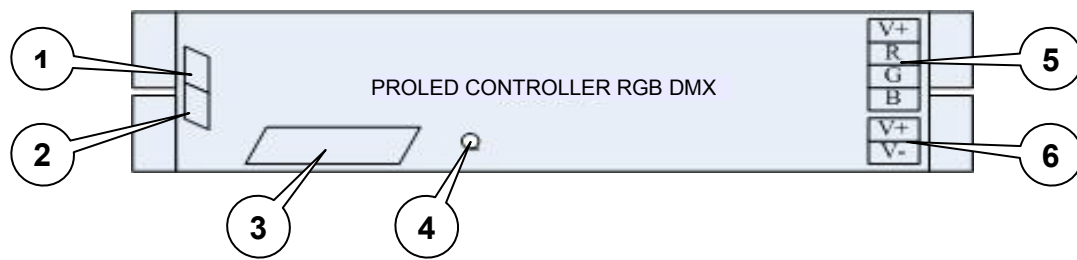

Pinout of the DMX connectors (1/2):

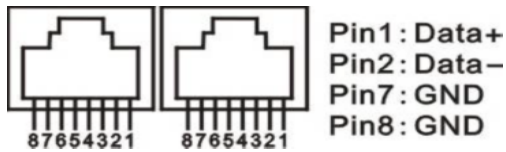

Dip switch for setting the DMX start address (3):

For setting the DMX address please refer to the dipswitch table on page 13.

IR Sensor (4):

Infrared sensor for controlling the PROLED RGB DMX Controller via IR remote control.

Output terminals (5):

Screw terminals for connecting all kinds of RGB LED modules or single colour LED modules with common anode (common plus) at the Controller RGB DMX version CA or common cathode (common minus) at the version CC. Output current is automatically adjusted according to the connected load.

Output terminals at the PROLED Controller RGB DMX CA: V+; R; G; B


Output terminals at the PROLED Controller RGB DMX CC: V-; R; G; B

DC Input (6):

Connector for a DC 12-24V power supply.

Operation

The PROLED Controller RGB DMX can be controlled via DMX-512 lighting desk or used as stand alone colourchanger with preprogrammed lighting sequences. Following illustration shows the installation when operated by a lighting control desk:

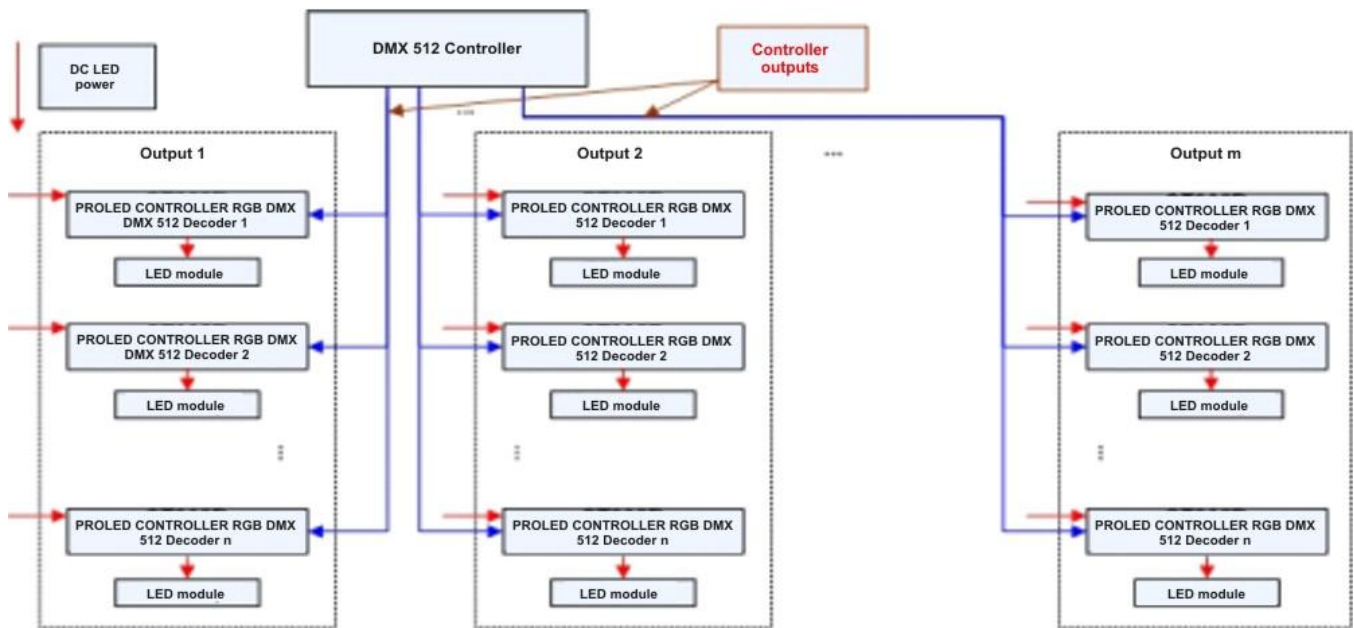

Note:
 m = Number of DMX512 controller outputs
 n = Number of terminals per output

Typical Wiring

PROLED Controller RGB DMX CA:
 (common anode LED module)



PROLED Controller RGB DMX CC:
 (common cathode LED module)



Functions of the IR Remote control

DMX: By pressing this button the controller will stop the running stand alone programm and revert back to DMX control.

P1-P5: by pressing these buttons one of the five preprogrammed colourchange sequences can be started.

P1: Manual colourchange red, orange, yellow, green, cyan, blue, purple, white

P2: Colourchange sequence R->RG->G->GB->B->RG->R

P3: Colourchange sequence R->RGB->B->RB->RGB->RG->G->RGB->RB->R

P4: Colourchange sequence B->R->G->B

P5: Colourchange sequence Black->R->Black->G->Black->B->Black

Lock: By pressing this button the stand alone program is stopped.

Fade: By pressing this button Flash or Fade Mode can be selected for the colourchange sequences (only P2-P5).

BRIGHTNESS: With the + und - buttons 16 different intensity levels can be selected.


SPEED: With the + und - buttons 16 different speeds can be selected for the stand alone program.



Preprogrammed Colourchange Sequences (P2-P5):

Flash Mode

Fade Mode

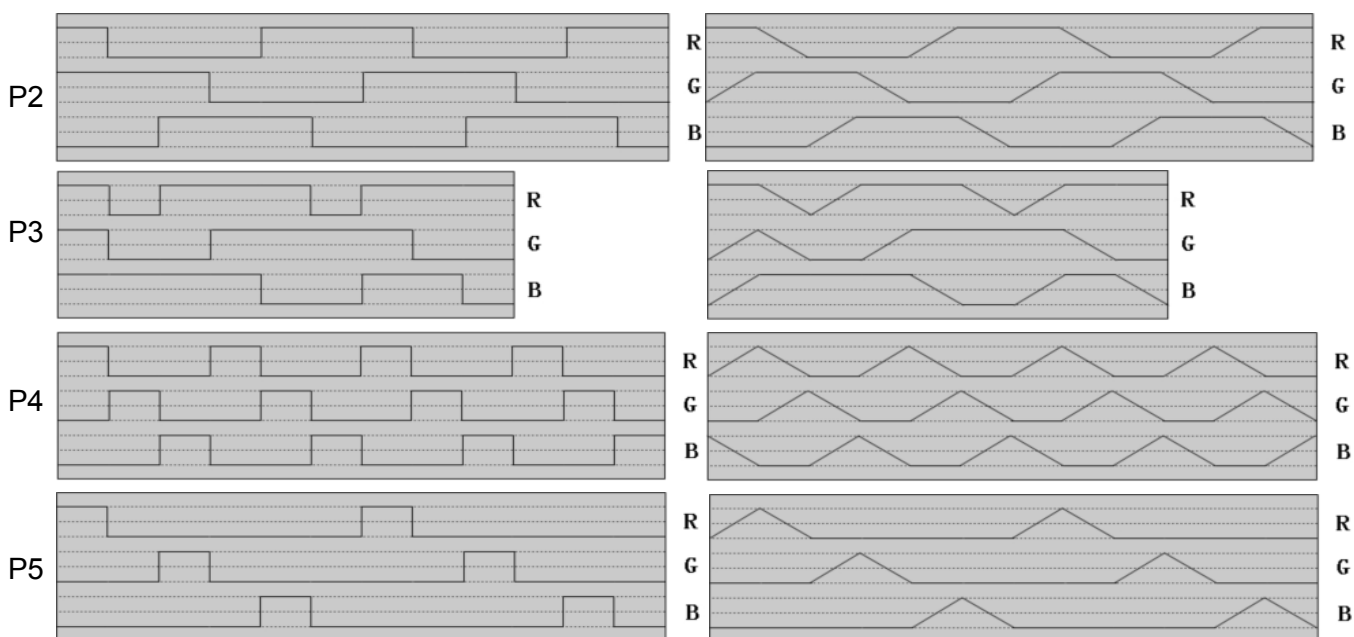

DMX Dipswitch Table

Dipswitch	DMX Addr.	Dipswitch	DMX Addr.	Dipswitch	DMX Addr.	Dipswitch	DMX Addr.
123456789	Number	123456789	Number	123456789	Number	123456789	Number
100000000	001	001101000	044	111010100	087	010000010	130
010000000	002	101101000	045	000110100	088	110000010	131
110000000	003	011101000	046	100110100	089	001000010	132
001000000	004	111101000	047	010110100	090	101000010	133
101000000	005	000011000	048	110110100	091	011000010	134
011000000	006	100011000	049	001110100	092	111000010	135
111000000	007	010011000	050	101110100	093	000100010	136
000100000	008	110011000	051	011110100	094	100100010	137
100100000	009	001011000	052	111110100	095	010100010	138
010100000	010	101011000	053	000001100	096	110100010	139
110100000	011	011011000	054	100001100	097	001100010	140
001100000	012	111011000	055	010001100	098	101100010	141
101100000	013	000111000	056	110001100	099	011100010	142
011100000	014	100111000	057	001001100	100	111100010	143
111100000	015	010111000	058	101001100	101	000010010	144
000010000	016	110111000	059	011001100	102	100010010	145
100010000	017	001111000	060	111001100	103	010010010	146
010010000	018	101111000	061	000101100	104	110010010	147
110010000	019	011111000	062	100101100	105	001010010	148
001010000	020	111111000	063	010101100	106	101010010	149
101010000	021	000000100	064	110101100	107	011010010	150
011010000	022	100000100	065	001101100	108	111010010	151
111010000	023	010000100	066	101101100	109	000110010	152
000110000	024	110000100	067	011101100	110	100110010	153
100110000	025	001000100	068	111101100	111	010110010	154
010110000	026	101000100	069	000011100	112	110110010	155
110110000	027	011000100	070	100011100	113	001110010	156
001110000	028	111000100	071	010011100	114	101110010	157
101110000	029	000100100	072	110011100	115	011110010	158
011110000	030	100100100	073	001011100	116	111110010	159
111110000	031	010100100	074	101011100	117	000001010	160
000001000	032	110100100	075	011011100	118	100001010	161
100001000	033	001100100	076	111011100	119	010001010	162
010001000	034	101100100	077	000111100	120	110001010	163
110001000	035	011100100	078	100111100	121	001001010	164
001001000	036	111100100	079	010111100	122	101001010	165
101001000	037	000010100	080	110111100	123	011001010	166
011001000	038	100010100	081	001111100	124	111001010	167
111001000	039	010010100	082	101111100	125	000101010	168
000101000	040	110010100	083	011111100	126	100101010	169
100101000	041	001010100	084	111111100	127	010101010	170
010101000	042	101010100	085	000000010	128	110101010	171
110101000	043	011010100	086	100000010	129	001101010	172
101101010	173	000110110	216	110000001	259	011101001	302
011101010	174	100110110	217	001000001	260	111101001	303

Dipswitch	DMX Addr.	Dipswitch	DMX Addr.	Dipswitch	DMX Addr.	Dipswitch	DMX Addr.
123456789	Number	123456789	Number	123456789	Number	123456789	Number
111101010	175	010110110	218	101000001	261	000011001	304
000011010	176	110110110	219	011000001	262	100011001	305
100011010	177	001110110	220	111000001	263	010011001	306
010011010	178	101110110	221	000100001	264	110011001	307
110011010	179	011110110	222	100100001	265	001011001	308
001011010	180	111110110	223	010100001	266	101011001	309
101011010	181	000001110	224	110100001	267	011011001	310
011011010	182	100001110	225	001100001	268	111011001	311
111011010	183	010001110	226	101100001	269	000111001	312
000111010	184	110001110	227	011100001	270	100111001	313
100111010	185	001001110	228	111100001	271	010111001	314
010111010	186	101001110	229	000010001	272	110111001	315
110111010	187	011001110	230	100010001	273	001111001	316
001111010	188	111001110	231	010010001	274	101111001	317
101111010	189	000101110	232	110010001	275	011111001	318
011111010	190	100101110	233	001010001	276	111111001	319
111111010	191	010101110	234	101010001	277	000000101	320
000000110	192	110101110	235	011010001	278	100000101	321
100000110	193	001101110	236	111010001	279	010000101	322
010000110	194	101101110	237	000110001	280	110000101	323
110000110	195	011101110	238	100110001	281	001000101	324
001000110	196	111101110	239	010110001	282	101000101	325
101000110	197	000011110	240	110110001	283	011000101	326
011000110	198	100011110	241	001110001	284	111000101	327
111000110	199	010011110	242	101110001	285	000100101	328
000100110	200	110011110	243	011110001	286	100100101	329
100100110	201	001011110	244	111110001	287	010100101	330
010100110	202	101011110	245	000001001	288	110100101	331
110100110	203	011011110	246	100001001	289	001100101	332
001100110	204	111011110	247	010001001	290	101100101	333
101100110	205	000111110	248	110001001	291	011100101	334
011100110	206	100111110	249	001001001	292	111100101	335
111100110	207	010111110	250	101001001	293	000010101	336
000010110	208	110111110	251	011001001	294	100010101	337
100010110	209	001111110	252	111001001	295	010010101	338
010010110	210	101111110	253	000101001	296	110010101	339
110010110	211	011111110	254	100101001	297	001010101	340
001010110	212	111111110	255	010101001	298	101010101	341
101010110	213	000000001	256	110101001	299	011010101	342
011010110	214	100000001	257	001101001	300	111010101	343
111010110	215	010000001	258	101101001	301	000110101	344
100110101	345	001000011	388	111101011	431	010110111	474
010110101	346	101000011	389	000011011	432	110110111	475

Dipswitch	DMX Addr.	Dipswitch	DMX Addr.	Dipswitch	DMX Addr.	Dipswitch	DMX Addr.
123456789	Number	123456789	Number	123456789	Number	123456789	Number
110110101	347	011000011	390	100011011	433	001110111	476
001110101	348	111000011	391	010011011	434	101110111	477
101110101	349	000100011	392	110011011	435	011110111	478
011110101	350	100100011	393	001011011	436	111110111	479
111110101	351	010100011	394	101011011	437	000001111	480
000001101	352	110100011	395	011011011	438	100001111	481
100001101	353	001100011	396	111011011	439	010001111	482
010001101	354	101100011	397	000111011	440	110001111	483
110001101	355	011100011	398	100111011	441	001001111	484
001001101	356	111100011	399	010111011	442	101001111	485
101001101	357	000010011	400	110111011	443	011001111	486
011001101	358	100010011	401	001111011	444	111001111	487
111001101	359	010010011	402	101111011	445	000101111	488
000101101	360	110010011	403	011111011	446	100101111	489
100101101	361	001010011	404	111111011	447	010101111	490
010101101	362	101010011	405	000000111	448	110101111	491
110101101	363	011010011	406	100000111	449	001101111	492
001101101	364	111010011	407	010000111	450	101101111	493
101101101	365	000110011	408	110000111	451	011101111	494
011101101	366	100110011	409	001000111	452	111101111	495
111101101	367	010110011	410	101000111	453	000011111	496
000011101	368	110110011	411	011000111	454	100011111	497
100011101	369	001110011	412	111000111	455	010011111	498
010011101	370	101110011	413	000100111	456	110011111	499
110011101	371	011110011	414	100100111	457	001011111	500
001011101	372	111110011	415	010100111	458	101011111	501
101011101	373	000001011	416	110100111	459	011011111	502
011011101	374	100001011	417	001100111	460	111011111	503
111011101	375	010001011	418	101100111	461	000111111	504
000111101	376	110001011	419	011100111	462	100111111	505
100111101	377	001001011	420	111100111	463	010111111	506
010111101	378	101001011	421	000001011	464	110111111	507
110111101	379	011001011	422	100001011	465	001111111	508
001111101	380	111001011	423	010001011	466	101111111	509
101111101	381	000101011	424	110001011	467	011111111	510
011111101	382	100101011	425	001001011	468	111111111	511
111111101	383	010101011	426	101001011	469		
000000011	384	110101011	427	011001011	470		
100000011	385	001101011	428	111001011	471		
010000011	386	101101011	429	000101011	472		
110000011	387	011101011	430	100101011	473		

The blue highlighted fields represent the DMX start addresses for 3 channel decoders such as the control of RGB modules, where one DMX address is needed for each channel.

Specifications

Channels:	3
Input signal:	DMX-512/1990 digital signal
Output signal:	0-100% PWM dimming signal; 5A power rating per channel
Power supply:	DC 12/24V
Output power:	108-360W
Range IR remote control:	≤10m
Operating temperature:	0-70°C
Measurements (l x h x d):	176mm x 30 mm x 39mm (can be custom made)
Weight:	220g

